



## Using the Carpet Glider

The amazing **Carpet Glider** accessory allows you to freshen and deodorize all your carpets and rugs with the sanitizing power of steam!

To use:

1. Attach the mop head to the micro-fiber cleaning pad.
2. Place the mop head, with cleaning pad attached, on top of the carpet glider.
3. Plug the power cord into a 120-volt electrical outlet.
4. Begin freshening your carpet or rug by pushing the mop and glider in a forward and backward motion, releasing steam as you go.
5. When you have finished freshening your carpet or rug, unplug the steam mop and remove the mop from the carpet or rug.

**PLEASE NOTE:** Move the mop and carpet glider along the carpet or rug in a continuous motion until you are finished. Please note, this product is not intended to be a carpet cleaner, only a carpet freshener. **DO NOT** leave the mop in one stationary position.



### **IMPORTANT**

**ALWAYS** vacuum carpet thoroughly before using the steam mop.

**DO NOT** use **without** the following:

- The carpet glider under the mop head
- Micro-fiber cleaning pad attached to the mop head
- Water in the water tank.

**ALWAYS** insure that the unit is "UNPLUGGED" from the electrical socket prior to filling with water and attaching the micro-fiber cleaning pad to the bottom of the mop head.

**PLEASE NOTE:** When using for the first time, water in the tank must make its way through the pump to the heater. In order to initiate this process, you may be required to pump the handle a few times release the steam.

*Read owners manuals for complete instructions on use and care of Shark Steam Mop.*

If you have questions, please contact **EURO-PRO** customer service at 1 (800) 798-7398.

**EURO-PRO**

Copyright EURO-PRO Operating LLC 2007  
Model S3101 Rev. 08/07